


Charm MRL Beta-lactam and Tetracycline DIP Test for Milk



Product Overview

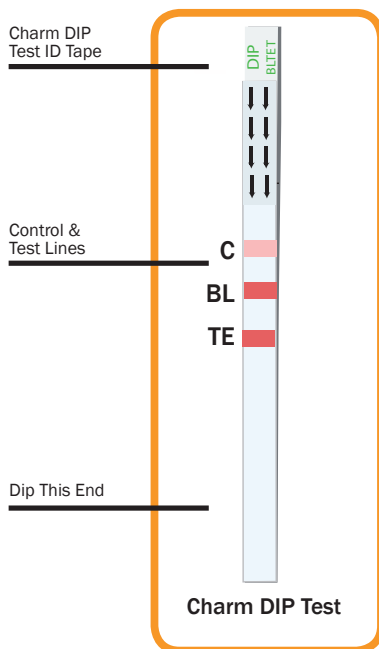

Charm® technology is trusted by the dairy industry worldwide for fast and accurate milk residue screening. The **Charm MRL Beta-lactam and Tetracycline DIP Test** detects Beta-lactam and Tetracycline drugs in raw commingled milk. The test follows a one-step procedure. Simply dip the strip into the sample and visually interpret within minutes.

Benefits Include:

- Achieves results in 10 minutes
- Detects Beta-lactam and Tetracycline drugs
- Incubates at 56 ± 1 °C
- Meets EU/CODEX MRL


Simple Procedure




Pipet 300 µL sample.



Place vial into Charm DIP Test Incubator.

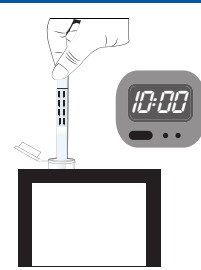


Incubate strip and visually read.

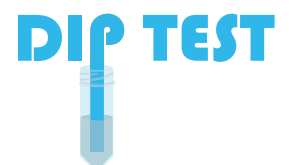

Charm MRL Beta-lactam DIP Test for Milk



Product Overview

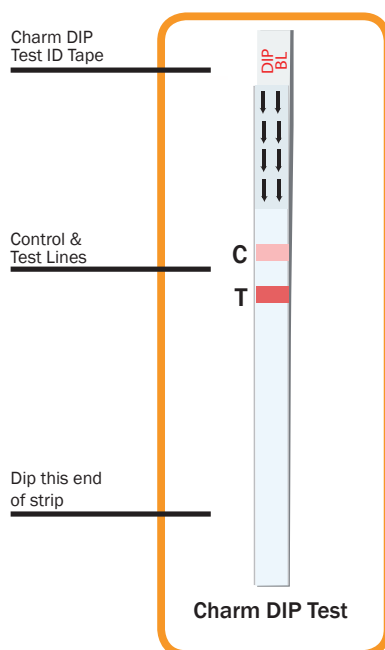

Charm® technology is trusted by the dairy industry worldwide for fast and accurate milk residue screening. The **Charm MRL Beta-lactam DIP Test** detects Beta-lactam drugs in raw commingled milk. The test follows a one-step procedure. Simply dip the strip into the sample and visually interpret within minutes.

Benefits Include:

- Achieves results in 10 minutes
- Detects Beta-lactam drugs
- Incubates at 56 ± 1 °C
- Meets EU/CODEX MRL


Simple Procedure



Pipet 300 µL sample.



Place vial into Charm DIP Test Incubator.

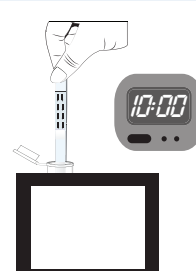

Incubate strip and visually read.

